



sOmfy TaHoma Switch Connected Controller Installation Guide

February 16, 2022 February 17, 2022

[Home](#) » [somfy](#) » sOmfy TaHoma Switch Connected Controller Installation Guide 



TaHoma switch
Installation guide

Welcome!
Start TaHoma switch
in a few steps




Contents [[hide](#)]

- 1 Pack content
- 2 Install TaHoma® app
- 3 Launch TaHoma® app
- 4 Plug power supply
- 5 Connect to the internet
- 6 Create your TaHoma® account or Log in
- 7 Documents / Resources
 - 7.1 Related Manuals / Resources

Pack content




Install TaHoma® app

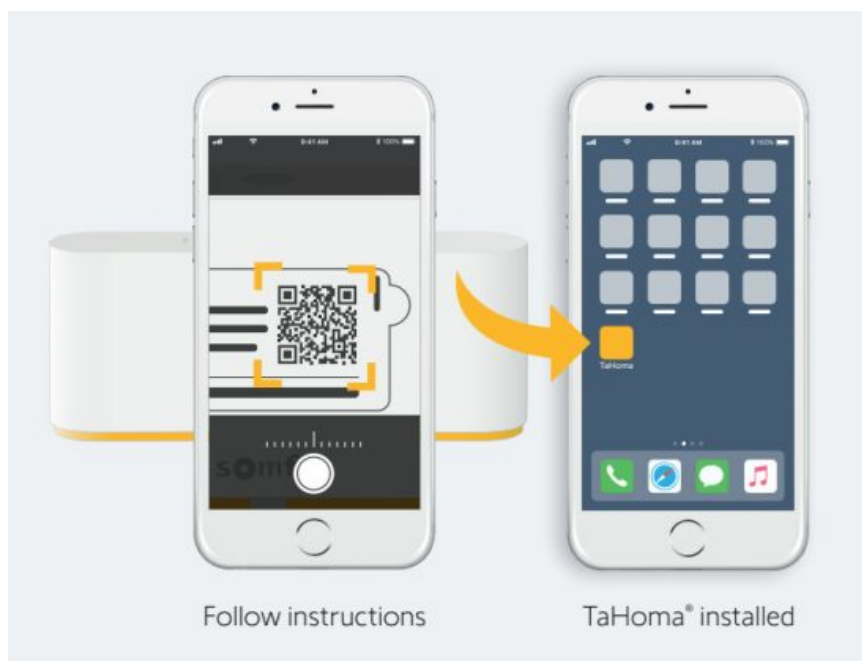


Launch TaHoma® app

Start

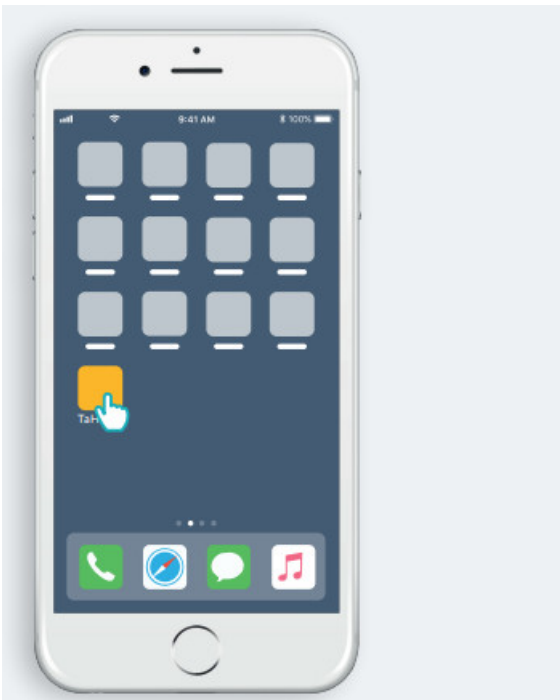


Open TaHoma® app
Start

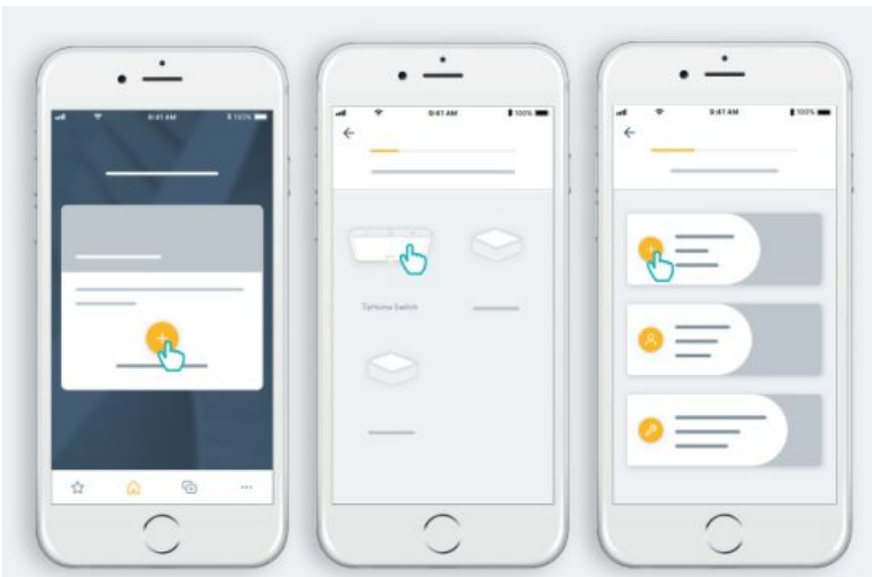

Start TaHoma switch installation

Plug power supply

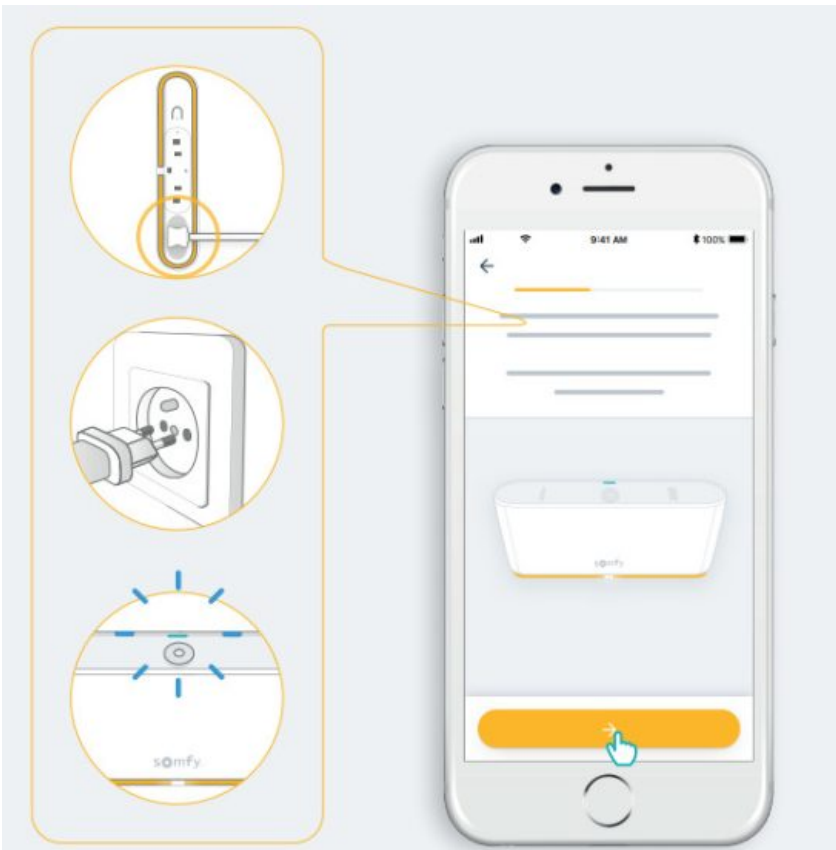


Connect to the internet

Your WiFi network must be in 2.4 GHz and secured with a password.




Accept Bluetooth

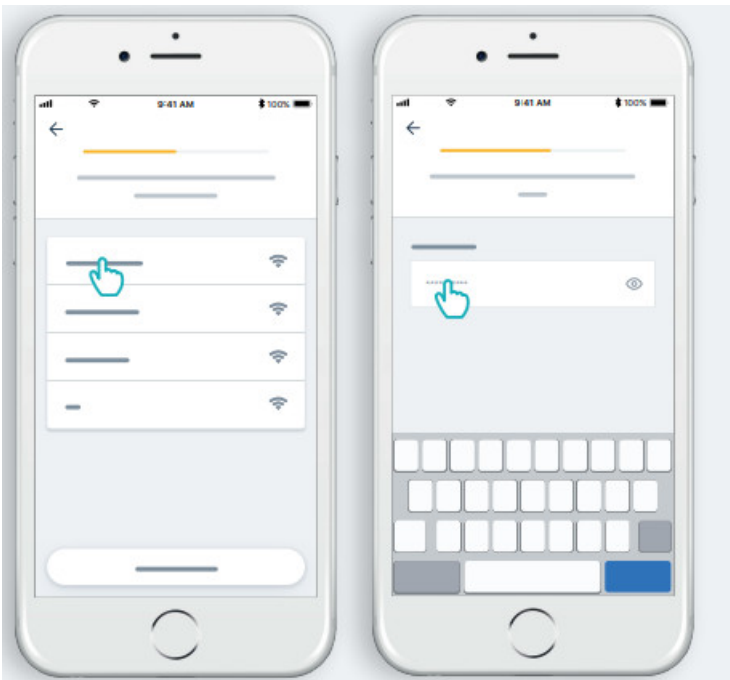


Select WiFi and enter a password

Create your TaHoma® account or Log in

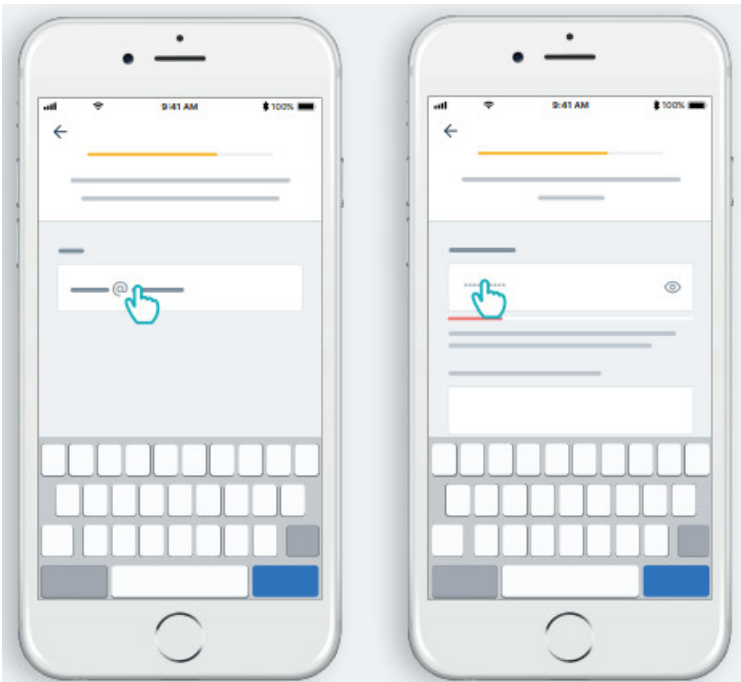


Enter your email address and password


Follow the instructions

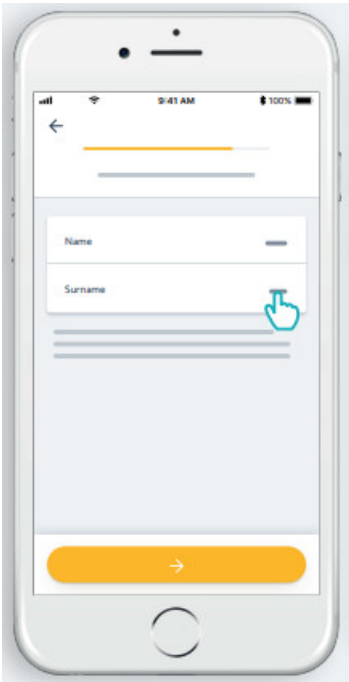

Enter your name

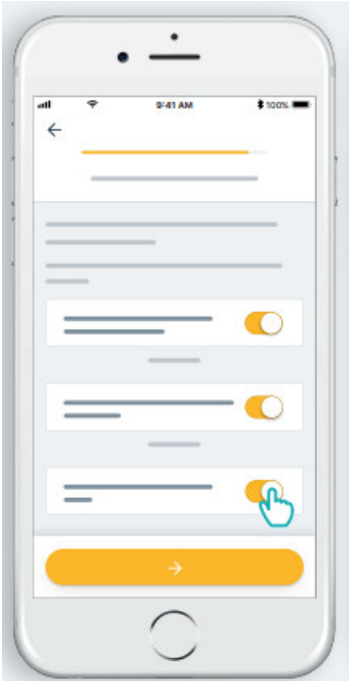


Accept Terms and conditions

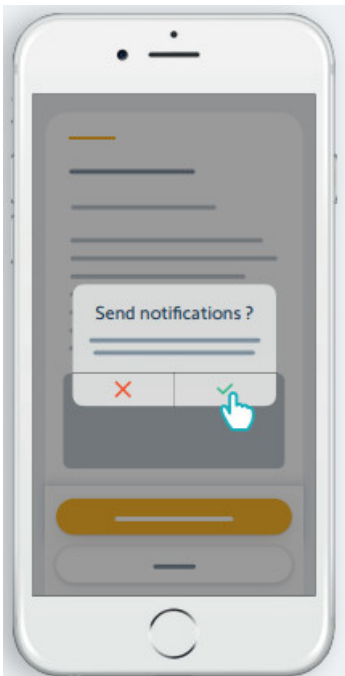

Authorize notifications for a better experience

**Congratulations,
TaHoma switch is ready to use!**

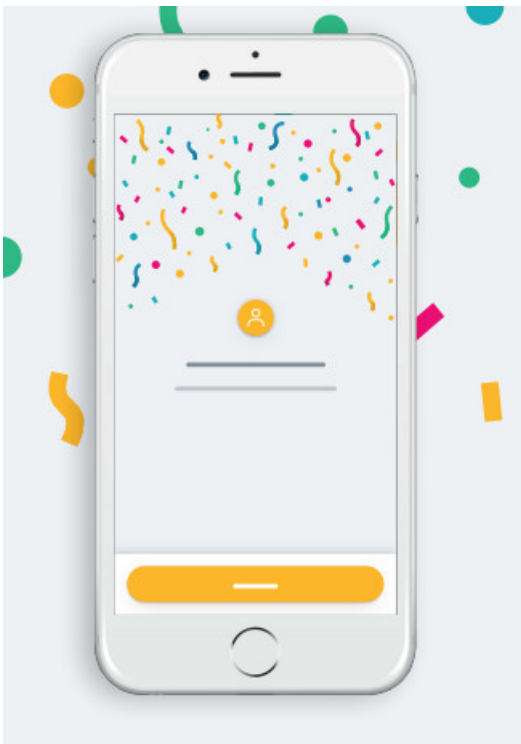

Now :

- Add products,
- Configure the buttons of the TaHoma switch,
- Discover all the possibilities offered by the app!

Documents / Resources



[sOmfy TaHoma Switch Connected Controller](#) [pdf] Installation Guide
TaHoma Switch, Connected Controller, TaHoma Switch Connected Controller

Related Manuals / Resources

[Manuals+](#),

[somfy TaHoma switch User Guide](#)

somfy TaHoma switch User Guide



[Nintendo Switch Pro Controller Diagram](#)

Applies to: Nintendo Switch Family, Nintendo Switch, Nintendo Switch Lite The Diagram showing the front of the Pro...



[NEW LEAF C3101R Wireless Switch and Controller Installation Guide](#)

Installation Guide Wireless Switch and Controller To avoid electric shock while installing the Receiver, please disconnect the mains...

[hama 00054648 Nintendo Switch Pro Controller User Guide](#)

hama 00054648 Nintendo Switch Pro Controller Nintendo Switch Pro Controller Hama GmbH & Co KG 86652 Monheim/ Germany...



[home](#)

- [privacy](#)

•